DASH go™

unprocess your food™

QUICK BLENDER

INSTRUCTION MANUAL

MODEL DFSB001

DASH GO QUICK BLENDER

TABLE OF CONTENTS

Safety Guidelines..... 4
Parts & Features..... 5
Using and Cleaning Your Toaster 6
Warranty..... 7

SAFETY GUIDELINES

- Read all instructions.
- Remove all bags and packaging from appliance before use.
- To reduce the risk of severe injury or damage, keep hands and utensils away from moving blades while appliance is engaged.
- Keep hands and utensils out of the Blending Pitcher while the motor is running.
- Do not put fingers, hair, clothing or other objects into the blender while appliance is in use. If food becomes lodged in the blades, turn off and unplug the Quick Blender before trying to remove it.
- Do not use Quick Blender without the Lid in place. Make sure the Lid is closed tightly prior to blending to prevent liquid from splashing out.
- Always make sure the Blending Pitcher is locked securely in place before engaging the motor. Do not remove the jug before blender has finished blending.
- Do not operate the appliance when the Blending Pitcher is empty.
- Caution: blender blades are sharp and can cause injury! Handle with care. Do not touch cutting blades located at the base of the Blending Pitcher.
- Do not use appliance outdoors or for commercial purposes.
- Children should be supervised to ensure that they do not play with the appliance.
- Turn off and unplug appliance when not in use.
- To prevent the risk of fire, electric shock, or personal injury, do not place the cord, plug, or unit near water or other liquids.
- When cleaning the Quick Blender, remove the Blending Pitcher from the Motor Base and wash. Never immerse the Motor Base in water or any other liquid; instead, wipe down with a damp cloth.
- Never leave appliance unattended when in use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they are provided with supervision and instruction concerning use of the appliance by a person responsible for their safety.
- Always unplug the appliance from outlet prior to assembly, disassembly, cleaning and storage.
- Wait until the blade comes to a complete stop before removing Blending Pitcher from Motor Base. If dismounted while blade is moving, the Drive Gear may sustain damage.
- Refrain from using attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock or personal injury.
- Do not use the appliance if any of the parts are damaged.
- If the Motor Base gives off a burnt smell, immediately turn off and unplug the Quick Blender. Allow appliance to cool before resuming use. If smell persists, discontinue use until problem is solved.
- Do not operate any appliance with a damaged cord or plug.
- Do not let the cord touch hot surfaces or hang over the edge of tables or counters.
- Improper use of the Quick Blender can result in property damage or even in personal injury.
- Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- Do not place utensils, fingers or other foreign objects inside the Quick Blender.
- Do not attempt to blend frozen ingredients that have formed a solid mass. Break up into smaller pieces before placing in Blending Pitcher.
- Note: The Quick Blender is not suitable for making crushed ice.
- Always place soft or liquid food in Blending Pitcher before adding hard food or ice cubes.
- Extension cords are not recommended for use with this appliance. However, if an extension cord must be used, make sure the electrical rating of the wire is compatible with the Quick Blender.
- Do not place hot liquids in Quick Blender. Allow ingredients to cool to room temperature prior to pouring into Blending Pitcher.
- Never blend more than the maximum ingredient capacity listed in the "Blender Settings Guide(see page 7).
- To prolong the life of the motor, do not use the Quick Blender for more than 1 minute at a time. Allow your Quick Blender to cool for 15 minutes between blending cycles.
- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

PARTS AND FEATURES

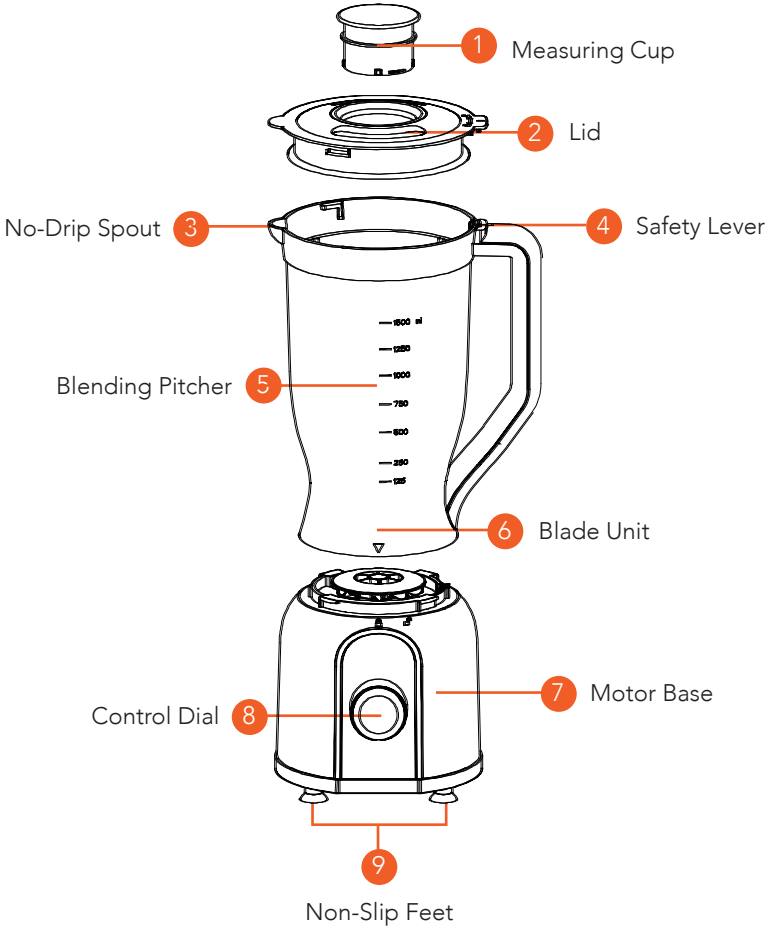

BEFORE YOU START

Clean your blender and all it's components prior to its first use!

WARNING: Do not submerge the main base in water or any liquid. Make sure the blender is unplugged.

- Read the entire instruction manual and save it for further use.
- Remove any stickers and packaging before use.
- Use a wet cloth to wipe down the Motor Base.
- Wash the Measuring Cup, Lid, and Blending Pitcher with soapy water and a sponge. Use a dish brush to clean the blades. Do not use your hands.

USING YOUR QUICK BLENDER

Clean the Quick Blender and all of its components prior to assembly and use.

WARNING: This appliance is NOT designed for blending foods without liquids.

NOTE: As a safety precaution, the quick blender will not function if the lid and blending pitcher are not securely locked into place. Never put hands or metal utensils inside pitcher.

1. Place the Motor Base on a stable surface. Plug the cord into a power outlet.
2. Place your ingredients in the Pitcher. Make sure to put all liquid ingredients in first, then powdered ingredients, and finally any solid ingredients. Refer to the "Blender Settings Guide" on page 7 to ensure that you do not exceed the maximum ingredient capacity.
3. Place the Lid on the Blending Pitcher. Turn Lid clockwise so that the tab on the Lid interlocks with the Safety Lever on the Pitcher.
4. Place the Blending Pitcher on the Motor Base so that the arrow on the jug aligns with the "Unlock" icon on the Motor Base. Lock the Pitcher into place by turning it clockwise until the arrow lines up with the "Lock" icon.
5. To begin blending, turn the Control Dial to the desired speed. Use the "Blender Settings Guide" to accurately choose the right speed setting for your recipe.
6. Once you are done blending, return the Control Dial to the "0" (Off) Position, allow the blade to come to a complete stop and unplug the Quick Blender and the toast is ready to enjoy!

BLENDER SETTINGS GUIDE

Setting	Function	Usage	Capacity
0	stops blending and powers off Motor Base	X	X
P	start/stop blending action for precise blending control	chops, dices, minces grinds, grates and mixes	500 mL
1	consistent low blending power	froths milk, beats eggs and whips up batters, milkshakes, sauces, dips & other light mixes	1 L
2	consistent high blending power	purées, liquifies and blends fruit smoothies, thick shakes & dips, frozen drinks and more	1-1.25 L

CLEANING YOUR QUICK BLENDER

IMPORTANT NOTE: Appliance is not dishwasher safe. No parts are dishwasher safe. Do not submerge motor base in water or any other liquids.

To clean your Blender:

1. Turn off and unplug the appliance. Remove the Blending Pitcher from the Motor Base.
2. Empty any contents remaining in the Pitcher into the trash.
3. Fill the Pitcher just below half way with warm water and a few drops of dish soap.
4. Cover Blending Pitcher with Lid and place on Motor Base. Turn the Control Dial to "P" or Pulse for a few seconds. Remove from Base and rinse thoroughly with hot or warm water. Dry with dishtowel.
5. Wipe down the Motor Base with a damp cloth. Never submerge the Motor Base in water or other liquids.
6. When storing the Blending Pitcher for an extended period of time, it is recommended to store it upside down to allow any residual moisture to evaporate.
7. If the Blade Unit requires a thorough cleaning, unscrew it from the Blending Pitcher. Use a dish brush and a little hot soapy water to clean the Blades and Sealing Ring. Rinse thoroughly, but make sure not to immerse the Blade Unit in water. Leave out to air dry. Handle Blades with care as they are sharp and can cause injury.

SUPPORT

For product support, warranty and maintenance related questions, please contact StoreBound directly at: 1-800-898-6970 from 7AM - 7PM PST, Monday - Friday, or by email at info@storebound.com.

STOREBOUND, LLC – 1 YEAR LIMITED WARRANTY

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact customer care at 1-800-898-6970 for further assistance and instruction. A customer care agent will conduct troubleshooting in an attempt to fix any minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO Box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

Send All Inquiries To: info@storebound.com
There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

For more information, please visit bydash.com
Customer Support 1-800-898-6970